


# 5 Channels RF receiver

09.09EAPD5.04704



**Important:** Read All Instructions Prior to Installation

## Function introduction

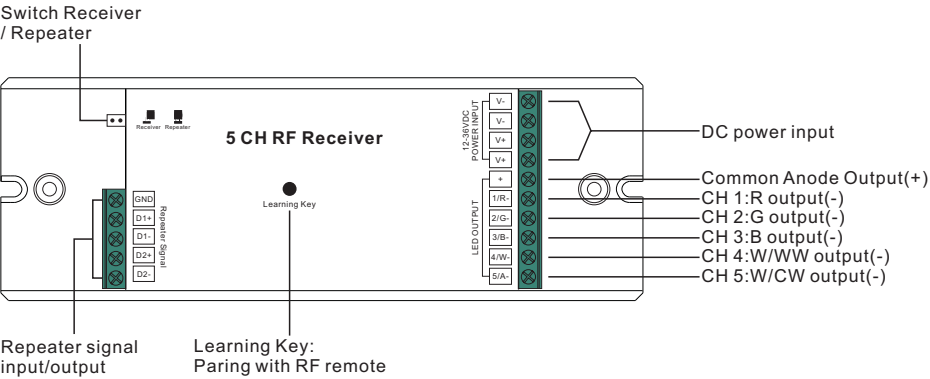

## Product Data

Input Voltage	Output Current	Output Power	Remarks	Size(LxWxH)
12-36VDC	5x5A	5x(60-180)W	Constant voltage	170x59x29mm

- Radio Frequency : 869.5/916.5/434mhz
- Waterproof grade: IP20

## Safety & Warnings

- DO NOT install with power applied to device.
- DO NOT expose the device to moisture.


## Pair/delete the pairing with RF remote

- 1.Do wiring according to connection diagram.
- 2.Pair RF Receiver with RF remote: please refer to the instruction of the remote that you would like to pair with.
- 3.Delete the pairing:
  - (1)Wire up the RF receiver correctly, power on.
  - (2)Press and hold down the “ **Learning Key**” button on receiver for over 3 seconds until the connected light flashes, which means well deleted.

## Receiver/Repeater setting jumper:

One receiver can connect multiple repeaters to realize perfect sync the sync distance can be over 100m no volt drop.

## Wiring Diagram

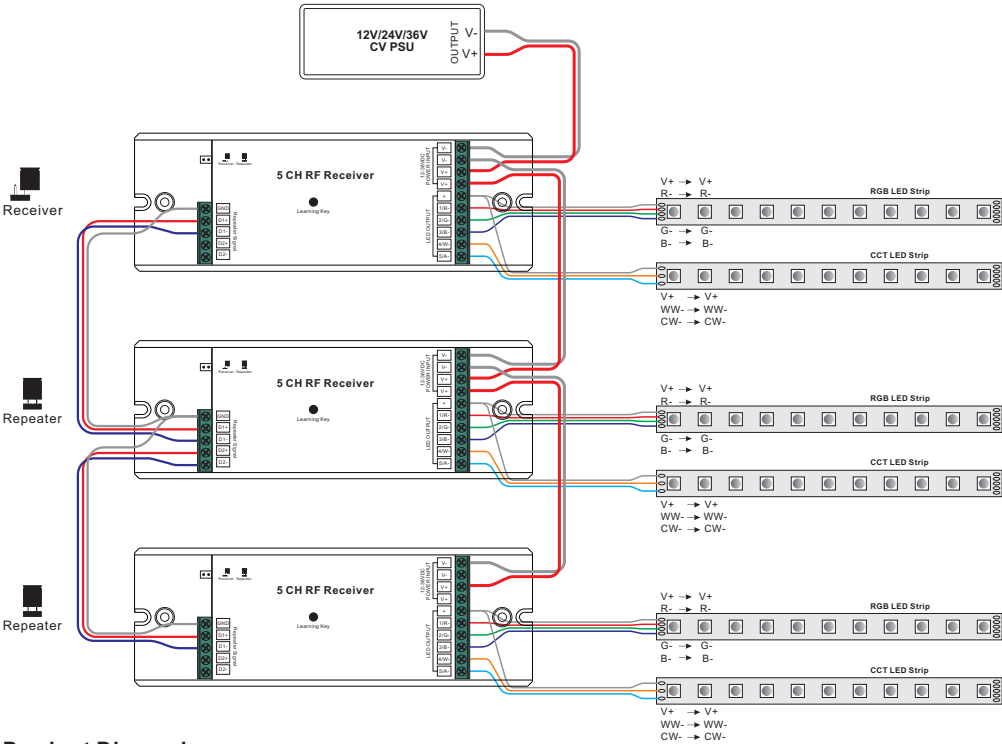

## Product Dimension

