
TAPE floor surface


INSTALLATION INSTRUCTIONS | NOVEMBER 2022




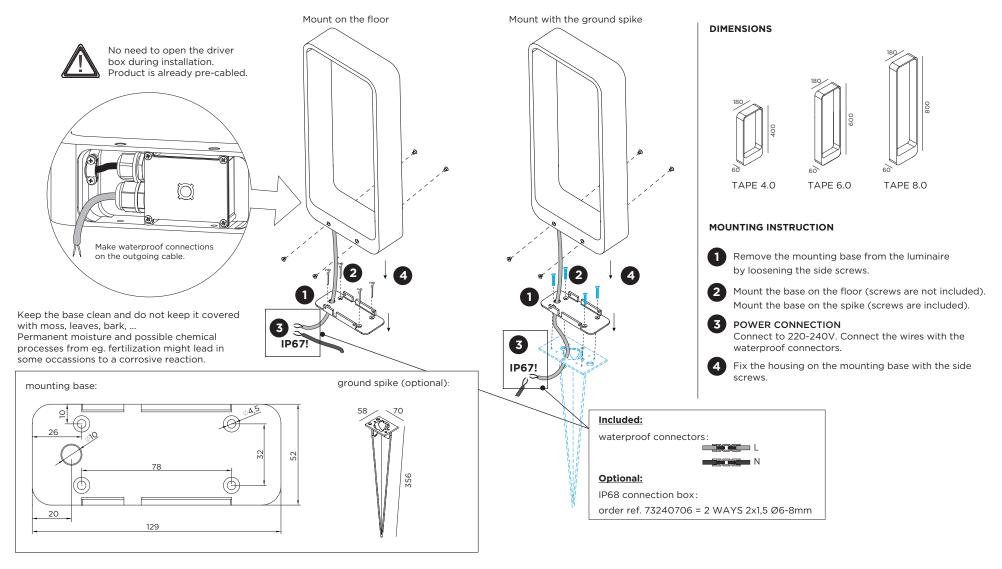


TAPE floor surface

INSTALLATION INSTRUCTIONS | NOVEMBER 2022

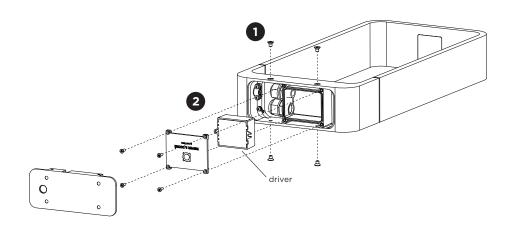

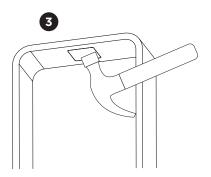

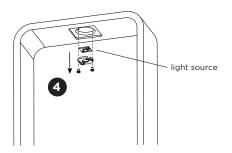



DISMOUNTING AND RECYCLING INSTRUCTIONS

Light source &driver

- 1 Loosen the side screws and remove the mounting plate.
- Loosen the screws, remove the cover from the waterproof box and cut the cables from the driver.

 The driver can now be removed.
- Break the glass.
- Unscrew the holder to remove the light source.



The driver can be replaced by the end user.



The light source is not replaceable.



This luminaire contains a light source with the energy class F.